



 

 







 

 

 

 

 

 





 

 









 

 

 

 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 DVD Menu	 D.Menu / Top
 3	 3	 Down	 Down
 Open/Close/Tv	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 4	 4	 Vol+	 Vol+
 5	 5	 Sound	 Sound / Title
 6	 6	 CH+	 CH+ / Page+
 Recall/Goto	 Fav / Marker / PC	 Vol-	 Vol-
 7	 7	 PIC	 Picture / Format
 8	 8	 CH-	 CH- / Page-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Aspect	 Shift + Picture / Format
 Tv Menu	 Menu / Home	 Rec/DVD Setup	 Rec / Rec Mode
 Source	 AV / Input / RDS	 Tv/Radio	 TV/Radio /
 UP	 Up	 Text	 Text / Goto

Original	Replacement	Original	Replacement
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 DVD Menu	 D.Menu / Top	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Vol+	 Vol+
 Vol+	 Vol+	 Sound	 Sound / Title
 CH+	 CH+ / Page+	 Vol-	 Vol-
 Vol-	 Vol-	 PIC	 Picture / Format
 PIC	 Picture / Format	 CH-	 CH- / Page-
 CH-	 CH- / Page-	 Sleep	 Sleep / Timer
 Sleep	 Sleep / Timer	 Aspect	 Shift + Picture / Format
 Aspect	 Shift + Picture / Format	 Rec/DVD Setup	 Rec / Rec Mode
 Rec/DVD Setup	 Rec / Rec Mode	 Tv/Radio	 TV/Radio /
 Tv/Radio	 TV/Radio /	 Text	 Text / Goto





Original	Replacement
Play/Pause/EPG	Play / Slow
Stop/FAV	Stop / Hold
Info	Info / Angle
Red/DVD/USB	Red / Netflix / Search
Green/Title	Green / APP / Repeat
Yellow/PBC	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play/Return	Shift + Play /
Pause/Display	Shift + Pause / Step /
Stop/DVD Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Reveal	Display / Media
Hold	Shift + Stop /

Hold

Original	Replacement
List	Smart / List
Index	Guide / EPG / -/-
Subpage	Back / Return
Size	Zoom / Size
Mix	Setup / OPT /
Freeze	Pause / Step / Freeze

