











 

 

 
 
 



 

















 



 



















 







Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 FM Mode	 Guide / EPG / -/-
 DVD	 Shift + 2	 Pre/Tun	 Fav / Marker / PC
 Tuner	 Shift + 6	 Memo	 Rec / Rec Mode
 Scart	 Yellow / YouTube / Repeat	 Auto	 D.Menu / Top
 AUX	 Shift + 7	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Left	 Left
 3	 3	 Right	 Right
 4	 4	 Enter	 OK
 5	 5	 Pause/Step	 Pause / Step / Freeze
 6	 6	 Play	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 Vol-	 Vol-
 9	 9	 Vol+	 Vol+
 0	 0	 CH-	 CH- / Page-
 +10	 Shift + Guide / EPG / -/-	 CH+	 CH+ / Page+





Original	Replacement
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Zoom	Zoom / Size
Prog	TV/Radio /
Slow	Shift + Play /
A-B	Shift + YouTube / YouTube /
Goto	Text / Goto
Title	Sound / Title
Menu	Menu / Home
Display	Display / Media
Subtitle	Subtitle / EQ
N/P	Shift + Setup / OPT / Tools
Language	Audio / Lang I/II
Angle	Info / Angle
Resume	Shift + Display / Media

Original	Replacement
Repeat	Green / APP / Repeat
R/L	Shift + Subtitle / EQ
Video	Shift + 4
Return	Back / Return

