



Original		Replacement		Original		Replacement	
	Power		Power		<<		<< / Tune-
	Tv/Radio		TV/Radio /		>>		>> / Tune+
	Red		Red / Netflix / Search		Rec		Rec / Rec Mode
	Green		Green / APP / Repeat		Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat		I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random		>>I/Index		>>I / Preset+
	P.Mode --		Fav / Marker / PC		Menu		Menu / Home
	Text		Text / Goto		Up		Up
	Hold		Shift + Stop /		Audio		Audio / Lang I/II
	S.Mode --		Guide / EPG / -/--		Left		Left
	Subtitle		Subtitle / EQ		OK		OK
	Size		Zoom / Size		Right		Right
	Aspect		Shift + Picture / Format		Sleep		Sleep / Timer
	Subpage		Eject / Surround		Down		Down
	Media		Smart / List		Exit		Exit / Cancel / Clear
	Play / Pause		Play / Slow		Vol+		Vol+
	Play / Pause		Pause / Step / Freeze		Mute		Mute / Dimmer





Original	Replacement	Original	Replacement
Power	Power	<<	<< / Tune-
Tv/Radio	TV/Radio /	>>	>> / Tune+
Red	Red / Netflix / Search	Rec	Rec / Rec Mode
Green	Green / APP / Repeat	Stop	Stop / Hold
Yellow	Yellow / YouTube / Repeat	I<<	I<< / Preset-
Blue	Blue / Prime Video / Random	>>I/Index	>>I / Preset+
P.Mode	Picture / Format	Menu	Menu / Home
Text	Text / Goto	Up	Up
Hold	Shift + Stop /	Audio	Audio / Lang I/II
S.Mode	Sound / Title	Left	Left
Subtitle	Subtitle / EQ	OK	OK
Size	Zoom / Size	Right	Right
Aspect	Shift + Picture / Format	Sleep	Sleep / Timer
Subpage	Eject / Surround	Down	Down
Media	Smart / List	Exit	Exit / Cancel / Clear
Play	Play / Slow	Vol+	Vol+
Pause	Pause / Step / Freeze	Mute	Mute / Dimmer



