



	Original	Replacement		
	Program	TV/RADIO /		
	-10/Fol-	CH- / Page-		
	+10/Fol+	CH+ / Page+		
	Play USB	Play / Slow		
	Pause USB	Pause / Step / Freeze		
	I<<	I<< / Preset-		
	<<	<< / Tune-		
	>>	>> / Tune+		
	>>	>>  / Preset+		
	Stop	Stop / Hold		
	Repeat/Random	Green / APP / Repeat		
	Vol-	Vol-		
	Vol+	Vol+		

Original	Replacement

