



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Phono	 Shift + 7
 Tuner	 Shift + 6
 CD	 Shift + 3
 CDR/Tape	 Shift + 5
 TV	 Shift + 1
 VCR	 Shift + 4
 SAT	 Shift + 0
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 Nothing	 Guide / EPG / -/-
 0	 0
 Menu	 Menu / Home
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 Play	 Play / Slow
 Vol-	 Vol-
 i/News T/A	 Info / Angle
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 Channel/Track	 >>I / Preset+











 

 

 

 

 

 



 













Original	Replacement
Mute	Mute / Dimmer
Power	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Nothing	Guide / EPG / -/--
0	0
Menu	Menu / Home
Up	Up
OK	OK

Original	Replacement
Left	Left
Right	Right
Vol+	Vol+
Down	Down
Play	Play / Slow
Vol-	Vol-
i/News T/A	Info / Angle
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Cancel	Exit / Cancel / Clear
Pause	Pause / Step / Freeze
T-C	TV/Radio /
Disc	Blue / Prime Video / Random





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 CD	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Nothing	 Guide / EPG / -/--
 0	 0
 Up	 Up
 Left	 Left
 Right	 Right

Original	Replacement
 Vol+	 Vol+
 Down	 Down
 Play	 Play / Slow
 Vol-	 Vol-
 i/News T/A	 Info / Angle
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 :>/Cancel	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze
 Disc	 Blue / Prime Video / Random

