



| Original   | Replacement               |
|------------|---------------------------|
| Standby    | Power                     |
| Open/Close | Eject / Surround          |
| Play Mode  | Smart / List              |
| Timer      | Sleep / Timer             |
| Repeat     | Green / APP / Repeat      |
| A-B        | Yellow / YouTube / Repeat |
| Title      | Sound / Title             |
| Display    | Display / Media           |
| Zoom       | Zoom / Size               |
| Menu       | Menu / Home               |
| Setup      | Setup / OPT /             |
| Return     | Back / Return             |
| Up         | Up                        |
| Left       | Left                      |
| Select     | OK                        |
| Right      | Right                     |
| Down       | Down                      |

| Original       | Replacement            |
|----------------|------------------------|
| Play           | Play / Slow            |
| Pause          | Pause / Step / Freeze  |
| Stop           | Stop / Hold            |
| I<< Skip       | I<< / Preset-          |
| Skip >>I       | >>I / Preset+          |
| << Search      | << / Tune-             |
| Search >>      | >> / Tune+             |
| Program+       | CH+ / Page+            |
| Rec Mode       | Shift + Rec / Rec Mode |
| Tv/DVD         | TV/Radio /             |
| Program-       | CH- / Page-            |
| Record         | Rec / Rec Mode         |
| Insert Chapter | Text / Goto            |
| Subtitle       | Subtitle / EQ          |
| Video Source   | AV / Input / RDS       |
| Audio          | Audio / Lang I/II      |
| Angle          | Info / Angle           |





| Original                   | Replacement            |
|----------------------------|------------------------|
| SEARCH MODE<br>SEARCH MODE | Red / Netflix / Search |
| 1                          | 1                      |
| 2                          | 2                      |
| 3                          | 3                      |
| CLEAR<br>Clear             | Exit / Cancel / Clear  |
| 4                          | 4                      |
| 5                          | 5                      |
| 6                          | 6                      |
| +10                        | Guide / EPG / -/--     |
| 7                          | 7                      |
| 8                          | 8                      |
| 9                          | 9                      |
| 0                          | 0                      |
|                            |                        |
|                            |                        |
|                            |                        |
|                            |                        |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

