
















 


 








| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  OP/CL |  Eject / Surround |  Angle |  Info / Angle |
|  Source |  AV / Input / RDS |  Audio |  Audio / Lang I/II |
|  Power |  Power |  Menu |  Menu / Home |
|  1 |  1 |  Up / CH+ |  Up |
|  2 |  2 |  Up / CH+ |  CH+ / Page+ |
|  3 |  3 |  Setup |  Setup / OPT / |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Enter |  OK |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Rev |  << / Tune- |
|  8 |  8 |  Down / CH- |  Down |
|  9 |  9 |  Down / CH- |  CH- / Page- |
|  0 |  0 |  Next |  >>I / Preset+ |
|  10+ |  Guide / EPG / -/- |  Fwd |  >> / Tune+ |
|  Auto Scan |  Sleep / Timer |  Prev |  I<< / Preset- |
|  Title / Text |  Sound / Title |  Vol- |  Vol- |
|  Subtitle |  Subtitle / EQ |  Play/Pause |  Play / Slow |





| | Original | Replacement | Original | Replacement |
|--|---------------|------------------------------|----------|-------------|
| | Play/Pause | Pause / Step / Freeze | | Prog / EPG |
| | Vol+ | Vol+ | | V.Mode |
| | Stop | Stop / Hold | | V.Mode |
| | Resume | Rec / Rec Mode | | Step |
| | Zoom | Zoom / Size | | A-B |
| | Mute | Mute / Dimmer | | |
| | Red / Clear | Exit / Cancel / Clear | | |
| | Red / Clear | Red / Netflix / Search | | |
| | Green / Ran | Green / APP / Repeat | | |
| | Yellow / PBC | Yellow / YouTube / Repeat | | |
| | Blue / Repeat | Shift + Green / APP / Repeat | | |
| | Blue / Repeat | Blue / Prime Video / Random | | |
| | OSD | Display / Media | | |
| | N/P | Text / Goto | | |
| | Slow | Shift + Play / | | |
| | Return | Back / Return | | |
| | Prog / EPG | TV/Radio / | | |

