

 













































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0
 Recall	 Back / Return
 Aspect	 Shift + Picture / Format
 Sound	 Sound / Title
 APP	 Display / Media

Original	Replacement
 Vol+	 Vol+
 Home	 Shift + Menu /
 Home	 D.Menu / Top
 CH+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-
 Picture	 Picture / Format
 TV	 Shift + 1
 TV	 TV/Radio /
 USB	 Shift + 8
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right





 



































































Original	Replacement
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info / Text Index	 Info / Angle
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / >>>	 >>> / Tune+
 Green / >>>	 Green / APP / Repeat
 Yellow / I<<<	 I<<< / Preset-
 Yellow / I<<<	 Yellow / YouTube / Repeat
 Blue / >>>I	 >>>I / Preset+
 Blue / >>>I	 Blue / Prime Video / Random
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 Repeat	 Shift + Green / APP / REPEAT
 Text	 Text / Goto
 Text Hold	 Shift + Stop / Hold
 Text Cancel	 Shift + Exit / Cancel / Clear

Original	Replacement
 Text Subpage	 Eject / Surround
 Text Reveal	 Shift + Play /
 Text Size	 Zoom / Size
 FAV	 Fav / Marker / PC
 SUB	 Subtitle / EQ
 List	 Smart / List















 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0
	Recall		Back / Return
	Aspect		Setup / OPT /
	Aspect		Shift + Picture / Format
	Sound		Sound / Title
	APP		Display / Media
	Vol+		Vol+
	Home		Shift + Menu /
	Home		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	CH-		CH- / Page-
	Picture		Picture / Format
	TV		TV/Radio /
	TV		Shift + 1
	USB		Shift + 8
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK





Original	Replacement
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info / Text Index	 Info / Angle
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow /  <<	  << / Preset-
 Yellow /  <<	 Yellow / YouTube / Repeat
 Blue / >>	 >>  / Preset+
 Blue / >>	 Blue / Prime Video / Random
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 Repeat	 Shift + Green / APP /
 Text	 Text / Goto
 Text Hold	 Shift + Stop /

Hold

Original	Replacement
 Text Cancel	 Shift + Exit / Cancel / Clear
 Text Subpage	 Eject / Surround
 Text Reveal	 Shift + Play /
 Text Size	 Zoom / Size
 Fav	 Fav / Marker / PC
 SUB	 Subtitle / EQ
 List	 Smart / List

