











 

 

 

 



 

 



 

 

 









 
 


 







 





 

 

 







Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	[i+]		Info / Angle
	Power		Power
	Eject		Eject / Surround
	On Timer		Setup / OPT /
	[]		Audio / Lang I/II
	[=]		Text / Goto
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Up		Up
	Menu		Menu / Home
	Back		Back / Return
	Down		Down
	OK		OK
	Show View		Smart / List
	1		1
	2		2
	3		3
	Timer On		Picture / Format
	4		4
	5		5
	6		6
	Timer REC/On/Off		Shift + Sleep / Timer
	7		7
	8		8
	9		9
	Timer REC/Clear		Zoom / Size
	-/--		Guide / EPG / -/--
	0		0
	C		Exit / Cancel / Clear
	Vol+		Vol+
	Progr+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original		Replacement		Original	Replacement
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Vol-		Vol-		
	Pogr-		CH- / Page-		
	REC		Rec / Rec Mode		
	Quick Timer		Shift + Setup / OPT / Tools		
	Tape Speed		Sound / Title		
	Counter Reset		Subtitle / EQ		
	Replay		Shift + Text /		
	Pause		Pause / Step / Freeze		
	Index Search I<<		I<< / Preset-		
	Index Search >>I		>>I / Preset+		
	<< REW		<< / Tune-		
	Play		Play / Slow		
	>> FF		>> / Tune+		
	Stop		Stop / Hold		

