



Original	Replacement
 Power	 Power
 System	 D.Menu / Top
 OSD	 Display / Media
 Open/Close	 Eject / Surround
 Title	 Sound / Title
 1	 1
 2	 2
 3	 3
 Menu	 Menu / Home
 4	 4
 5	 5
 6	 6
 PBC	 Picture / Format
 7	 7
 8	 8
 9	 9
 Setup	 Setup / OPT /

Original	Replacement
 0	 0
 +10	 Guide / EPG / -/-
 Clear	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Up	 Up
 Step	 Shift + Pause / Step /
 Left	 Left
 Enter	 OK
 Right	 Right
 Slow	 Shift + Play /
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 << / FR	 << / Tune-
 >> / FF	 >> / Tune+





Original		Replacement		Original		Replacement	
	I<</Prev		I<< / Preset-				
	>>I/Next		>>I / Preset+				
	Repeat		Green / APP / Repeat				
	Rep A-B		Yellow / YouTube / Repeat				
	Program		TV/Radio /				
	Random		Blue / Prime Video / Random				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				
	Resume		AV / Input / RDS				
	Down/-		Vol-				
	Up/+		Vol+				
	Function		Fav / Marker / PC				
	Mute		Mute / Dimmer				
	Goto		Text / Goto				
	L/R		Smart / List				

