 

 















 



 







 



 







 



 

 









 

 











Original		Replacement		Original		Replacement	
	Power		Power		Reveal		Smart / List
	Mute		Mute / Dimmer		Sub.PG		Display / Media
	1		1		Down.PG		CH- / Page-
	2		2		Up/CH+		Up
	3		3		Vol-		Vol-
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Vol+		Vol+
	7		7		Right		Right
	8		8		Scan		Setup / OPT /
	9		9		Down/CH-		Down
	-/--		Guide / EPG / -/--		Tv/AV		AV / Input / RDS
	0		0		Play		Play / Slow
	Recall		Back / Return		Pause		Pause / Step / Freeze
	Size Aspect		Zoom / Size		Stop/DVB-Menu		Stop / Hold
	Index		Info / Angle		Exit/Eject		Exit / Cancel / Clear
	Up.PG		CH+ / Page+		Sleep/USB-C.R.		Sleep / Timer



