


 

 





























Original	Replacement
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 DVD	 Shift + 2
 Tuner	 Shift + 6
 AUX 1	 Red / Netflix / Search
 AUX 2	 AV / Input / RDS
 N/P	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Language	 Audio / Lang I/II
 Angle	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Time	 Sleep / Timer
 Title	 Sound / Title
 Prog	 Shift + TV/Radio / Program
 CH Set	 Smart / List
 Volume+	 Vol+
 Menu	 Menu / Home
 Display	 Display / Media
 Slow	 Shift + Play /
 Volume -	 Vol-
 FM Mode	 TV/Radio /
 Pre / Tun	 Picture / Format
 Up	 Up
 Left	 Left





Original	Replacement	Original	Replacement
Enter	OK		
Right	Right		
Setup	Setup / OPT /		
Down	Down		
Repeat	Green / APP / Repeat		
2.1/5.1	D.Menu / Top		
Step	+ Shift + Pause / Step /		
Zoom	Zoom / Size		
Resume	Text / Goto		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Play	Play / Slow		
A-B	Yellow / YouTube / Repeat		
<< / Memo	<< / Tune-		
>> / Auto	>> / Tune+		
I<< / Down	I<< / Preset-		
>>I / Up	>>I / Preset+		

