





 














Original	Replacement
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





	Original	Replacement	Original	Replacement
	[/ =]	PROGRAM TV/RADIO		TV/Radio /
	<</[...]	TUNE-		<< / Tune-
	>>/[?]	TUNE+		>> / Tune+
	[X]	PC FAV MARKER		Fav / Marker / PC
	Red/↑	NETFLIX SEARCH		Red / Netflix / Search
	Green/←	APP REPEAT		Green / APP / Repeat
	Yellow/→	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue/Enter/H.Lock	Prime Video RANDOM		Blue / Prime Video / Random
	White/↓/CH.List	CH.LIST GUIDE EPG		Guide / EPG / -/--
	Pause/Timer	STEP-FREEZE		Pause / Step / Freeze
	[♦]/Zoom	ZOOM		Zoom / Size
	Exit	CLEAR EXIT CANCEL		Exit / Cancel / Clear

