




Original		Replacement		Original	Replacement
	Power		Power		
	Mute		Mute / Dimmer		
	+		Up		
	+		Vol+		
	l<<		Left		
	l<<		l<< / Preset-		
	Play/Pause		OK		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>l		Right		
	>>l		>>l / Preset+		
	-		Down		
	-		Vol-		
	Source		AV / Input / RDS		
	Equalizer		Sound / Title		
	Bass-		CH- / Page-		
	Bass+		CH+ / Page+		

