



| Original | Replacement |
|----------|-------------|
| | Power |
| | Source |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | TTX/MIX |
| | 0 |
| | PRE-CH |
| | Vol+ |
| | Mute |
| | CH+ |

| Original | Replacement |
|----------|-------------|
| | Vol- |
| | CH List |
| | CH- |
| | Netflix |
| | Home |
| | prime video |
| | Samsung TV |
| | Up |
| | Disney+ |
| | Left |
| | Enter |
| | Right |
| | Return |
| | Down |
| | Exit |
| | Red |
| | Green |





| Original | | Replacement | | Original | Replacement |
|----------|----------|-------------|-----------------------------|----------|-------------|
| | Yellow | | Yellow / YouTube / Repeat | | |
| | Blue | | Blue / Prime Video / Random | | |
| | Settings | | Setup / OPT / | | |
| | Info | | Info / Angle | | |
| | AD/SUBT. | | Subtitle / EQ | | |
| | Stop | | Stop / Hold | | |
| | << | | << / Tune- | | |
| | I<< | | I<< / Preset- | | |
| | Play | | Play / Slow | | |
| | Pause | | Pause / Step / Freeze | | |
| | >> | | >> / Tune+ | | |
| | >>I | | >>I / Preset+ | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

