















 



 



 



 



 







 

 





 
 


 



 

 



 









Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		Setup		Setup / OPT /
	1		1		P-		CH- / Page-
	2		2		Home		Shift + Menu /
	3		3		Up		Up
	4		4		Menu		Menu / Home
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	T		Display / Media		Input		AV / Input / RDS
	0		0		Exit		Exit / Cancel / Clear
	List		Smart / List		Guide		Guide / EPG / -/-
	Vol+		Vol+		Text		Text / Goto
	Info		Info / Angle		Lang		Audio / Lang I/II
	P+		CH+ / Page+		Subt.		Subtitle / EQ



