
 







 














 





Original		Replacement		Original		Replacement	
	Power		Power		Time		Sleep / Timer
	Open/Close		Eject / Surround		Title		Sound / Title
	OSD		Display / Media		Up		Up
	1		1		Menu		Menu / Home
	2		2		Left		Left
	3		3		Enter		OK
	Step		Shift + Pause / Step /		Right		Right
	4		4		Setup		Setup / OPT /
	5		5		Down		Down
	6		6		Zoom		Zoom / Size
	DVD/USB		AV / Input / RDS		I<<		I<< / Preset-
	7		7		L/R		Red / Netflix / Search
	8		8		N/P		Blue / Prime Video / Random
	9		9		<<		<< / Tune-
	Mute		Mute / Dimmer		Vol-		Vol-
	0/10		0		Vol+		Vol+
	10+		Guide / EPG / -/--		>>I		>>I / Preset+



