















 



 



 

 

 

 
 












 

 



 







 



 

 







	Original	Replacement		Original	Replacement
	Power	 Power		0/VCR	 0
	[+]	 Info / Angle		-/--	 Guide / EPG / -/--
	Mute	 Mute / Dimmer		Vol-	 Vol-
	Tv/AV	 AV / Input / RDS		Tv/Text	 Text / Goto
	1	 1		F.P.	 Sleep / Timer
	2	 2		[i]/Index	 TV/Radio /
	3	 3		[+]/Hold	 Picture / Format
	CH+	 CH+ / Page+		Red	 Red / Netflix / Search
	4	 4		Green	 Green / APP / Repeat
	5	 5		Yellow	 Yellow / YouTube / Repeat
	6	 6		Blue	 Blue / Prime Video / Random
	CH-	 CH- / Page-		<<	 << / Tune-
	7	 7		Play	 Play / Slow
	8	 8		>>	 >> / Tune+
	9	 9		Stop	 Stop / Hold
	Vol+	 Vol+		[?]/Reveal	 Smart / List
	C	 Back / Return		[o]/Time Text	 Display / Media



