 



 















 



 







 






Original	Replacement
 Power	 Power
 Setup	 Setup / OPT /
 DTV	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 HDMI/AV	 AV / Input / RDS
 4	 4
 5	 5
 6	 6
 Disc	 Shift + 3
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 TTX	 Text / Goto

Original	Replacement
 0	 0
 Movie	 Display / Media
 Music	 Smart / List
 Photo	 Picture / Format
 Vol-	 Vol-
 Vol+	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Home	 Menu / Home
 Edit	 Back / Return
 Copy	 Shift + Smart / List
 Repeat	 Green / APP / Repeat
 <<	 << / Tune-





Original		Replacement		Original	Replacement
	Play/Pause		Play / Slow		
	I<<		I<< / Preset-		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	>>I		>>I / Preset+		
	Audio		Audio / Lang I/II		
	Sub-T		Subtitle / EQ		
	FAV		Fav / Marker / PC		
	Info		Info / Angle		
	Mute		Mute / Dimmer		
	DVD		Shift + 2		
	Timer		Sleep / Timer		
	T/R		Zoom / Size		

