







 

























 

 

 

 































Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





Original	Replacement
 EPG	 Guide / EPG / -/--
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Red/DVD/USB	 Red / Netflix / Search
 Green/Title	 Green / APP / Repeat
 Yellow/PBC	 Yellow / YouTube / Repeat
 Blue/Angle	 Blue / Prime Video / Random
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Return	 Back / Return
 Display	 Display / Media
 DVD Audio	 Audio / Lang I/II

Original	Replacement
 Subtitle	 Subtitle / EQ
 Reveal	 Shift + Exit / Cancel / Clear
 Hold	 Shift + Stop /
 List	 Smart / List
 Index	 TV/Radio /
 Subpage	 Shift + Smart / List
 Size	 Zoom / Size
 Mix	 Shift + Display / Media
 Freeze	 Shift + Pause / Step /

