











 



 


 



 




 







Original	Replacement	Original	Replacement
 Power	 Power	 Clear	 Exit / Cancel / Clear
 Eject	 Eject / Surround	 Enter	 Mute / Dimmer
 OTPB	 Smart / List	 Enter	 Shift + OK
 Showview	 D.Menu / Top	 << Search	 I<< / Preset-
 Tv/VCR	 TV/Radio /	 Search >>	 >>I / Preset+
 1	 1	 Pause/Still	 Pause / Step / Freeze
 2	 2	 Play	 Play / Slow
 3	 3	 Rec/OTR	 Rec / Rec Mode
 4	 4	 <</REW	 << / Tune-
 5	 5	 >>/F.FWD	 >> / Tune+
 6	 6	 Stop	 Stop / Hold
 7	 7	 Menu	 Menu / Home
 8	 8	 Up	 Up
 9	 9	 D/WLY	 Red / Netflix / Search
 Channel+	 CH+ / Page+	 ADD T	 Green / APP / Repeat
 0	 0	 Left	 Left
 Channel-	 CH- / Page-	 OK	 OK





Original	Replacement	Original	Replacement
	Right		Right
	SP/LP		Picture / Format
	Index		Info / Angle
	+		Vol+
	Down		Down
	Memo		Blue / Prime Video / Random
	Reset		Back / Return
	Display		Display / Media
	-		Vol-
	A-TR		Text / Goto
	CH NO. Set		AV / Input / RDS
	Clock Set		Setup / OPT /
	Auto Set		Zoom / Size

