

 
 


 







 


 
 
 


 





 

 

 
 
 

 


 


 


 

 

 
 
 




 
 

 

 


 






 

 




Original		Replacement		Original		Replacement	
	Standby		Power		Display		Info
	Mute		Mute		TV / Radio		TV/R
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		FAV		Pre Ch
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Rec List		List		Rec		Rec
	Recall		Back		Timeshift		Media
	Auto		Smart		CH+		Ch +
	Subtitle		Subt		CH-		Ch -
	Audio		Dual		Source		AV





Original	Replacement
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Sleep	 Sleep
 Text	 Text
 Hold	 Shift + Stop
 Reveal	 3D
 Subpage	 Shift + Subt
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Index	 D. Menu
 Size	 Format
 <<<	 <<<
 >>>	 >>>
 I<<<	 I<<<
 >>>I	 >>>I
 Red	 A

Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

