

 
 




 

 

 
 

 

 
 






 




 
 
 
 
 

 

 

 

 

 



 

 


 
 
 
 
 
 

 




 

 


 



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Picture	 + 	Shift + Format		FAV		Pre Ch
	Sound	 + 	Shift + Dual		Recall		Back
	Input		AV		CH+		Ch +
	Menu		Menu		CH-		Ch -
	Exit		Exit		Vol+		Vol +
	16:9/4:3		Format		Vol-		Vol -
	Info		Info		Mute		Mute
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Subtitle		Subt
	7		7		Audio		Dual
	8		8		Goto		Guide
	9		9		Repeat	 + 	Shift + Text





Original	Replacement
 CH/List	 List
 Size	 Eject
 Sleep	 Sleep
 ECO/TFT Off	 3D
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Tv/TXT	 Text
 Subpage	 Options
 Hold	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue

