



 



 

 



 

 

 
 
 

 















Original	Replacement
 Power	 Power
 i	 INFO
 TV / Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 PRE-CH
 Guide	 GUIDE
 V+	 Vol +
 V-	 Vol -

Original	Replacement
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 BEIN	 Smart
 Back	 Back
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Red / Lang	 Red
 Green / .:	 Green
 Yellow	 Yellow
 Blue	 Blue

