



 

 
 








 

 



 

 
 

 








 



 

 

 















 







 











Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 CH- / Page-
 Source	 AV / Input / RDS	 V-Format	 Picture / Format
 Page Up	 Shift + CH+ /	 Mute	 Mute / Dimmer
 Page Up	 Shift + Up	 Recall	 Back / Return
 Menu	 Menu / Home	 Play	 Play / Slow
 Up	 Up	 I<	 I<< / Preset-
 Left	 Left	 <<	 << / Tune-
 OK	 OK	 Pause	 Pause / Step / Freeze
 Right	 Right	 >>	 >> / Tune+
 Down	 Down	 >I	 >>I / Preset+
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 Page Down	 Shift + CH- /	 1	 1
 Page Down	 Shift + Down	 2	 2
 Vol +	 Vol+	 3	 3
 More	 Smart / List	 4	 4
 CH+	 CH+ / Page+	 5	 5
 Vol -	 Vol-	 6	 6





	Original	Replacement	Original	Replacement
	7	 7		
	8	 8		
	9	 9		
	0	 0		

