



Original	Replacement	Original	Replacement
Standby	Shift + Mute / Dimmer	Info	Info / Angle
Mute	Mute / Dimmer	Left	Left
ATV	Shift + AV / Input / RDS	OK	OK
TV / Radio	TV/Radio /	Right	Right
TV Guide	Guide / EPG / -/--	Menu	Menu / Home
USB	Shift + 8	Down	Down
S.Mode	Sound / Title	Exit	Exit / Cancel / Clear
USB I<<	I<< / Preset-	1	1
USB >>I	>>I / Preset+	2	2
USB Stop	Stop / Hold	3	3
P.Mode	Picture / Format	4	4
USB <<	<< / Tune-	5	5
USB >>	>> / Tune+	6	6
USB Play/Pause	Shift + Play /	7	7
USB Play/Pause	Play / Slow	8	8
AV Source	AV / Input / RDS	9	9
Up	Up	0	0





Original		Replacement	
	Recall		Back / Return
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Subtitle		Subtitle / EQ
	Aspect		Shift + Picture / Format
	CH+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Index		Eject / Surround
	Reveal		Shift + Back / Return

Original		Replacement	
	Power Display		Power
	Power Display		Shift + Power
	Size		Zoom / Size
	Hold / 3D		Shift + Stop /
	Hold / 3D		Shift + 3

