



Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 Text	 Text / Goto
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop/Text Hold	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Aspect	 Zoom / Size
 Audio	 Audio / Lang I/II
 Recall	 Back / Return

Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 S.Mode	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-





	Original	Replacement		Original	Replacement
	Tv Guide	Guide / EPG / -/--			
	CH-	CH- / Page-			
	1	1			
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	DTV/Radio	TV/Radio /			
	0	0			
	USB	Shift + 8			

