










 





 




 









Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 -/--	 Shift + Guide / EPG / -/--
 Screen	 Display / Media	 Return	 Back / Return
 Tv/AV	 AV / Input / RDS	 Rec	 Rec / Rec Mode
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Right	 Right
 Open/Close	 Eject / Surround	 Vol-	 Vol-
 4	 4	 OK	 OK
 5	 5	 Vol+	 Vol+
 6	 6	 Down	 Down
 Play	 Play / Slow	 CH-	 CH- / Page-
 Pause	 Pause / Step / Freeze	 Left	 Left
 7	 7	 Tv-Menu	 Menu / Home
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Info	 Info / Angle
 Stop	 Stop / Hold	 Subtitle	 Subtitle / EQ





Original		Replacement		Original		Replacement	
	Picture/LAN		Picture / Format		I<</Size		I<< / Preset-
	Sound/Zoom		Zoom / Size		>>I / Index		>>I / Preset+
	Sound/Zoom		Sound / Title		Red/Pro		Red / Netflix / Search
	Nicam/A2/Sub		Audio / Lang /I/I		Green/Slow		Shift + Play /
	Sleep/Goto		Shift + Text /		Green/Slow		Green / APP / Repeat
	Sleep/Goto		Sleep / Timer		Yellow / Rep		Yellow / YouTube / Repeat
	EPG/Set		Guide / EPG / -/--		Yellow / Rep		Shift + Green / APP /
	FAV/Menu		Fav / Marker / PC		Blue / A-B		Blue / Prime Video / Random
	FAV/Menu		D.Menu / Top		Blue / A-B		Shift + Yellow / YouTube /
	Channel List/ANG		Smart / List				
	Tv/Radio / Title		Shift + Sound / Title				
	Tv/Radio / Title		TV/Radio /				
	<<		<< / Tune-				
	Text		Text / Goto				
	>>/Hold		Shift + Stop /				
	>>/Hold		>> / Tune+				
	I<</Size		Shift + Zoom / Size				

