
 

 


 


 
 








Original	Replacement	Original	Replacement
	Power		Source
	Mute		AV / Input / RDS
	1		Up
	2		Audio / Lang I/II
	3		Left
	4		OK
	5		Right
	6		Down
	7		Exit
	8		Menu
	9		Vol+
	Recall		Mouse On/Off
	0		CH+
	Sleep		Vol-
	Shift + 1		Shift + Menu /
	Shift + 2		CH- / Page-
	Smart / List		Picture / Format
			Sound / Title





Original		Replacement	
	Display		Display / Media
	Fav		Fav / Marker / PC
	TXT		Text / Goto
	Sub / Index		Subtitle / EQ
	EPG / S.Page		Guide / EPG / -/-
	Size		Zoom / Size
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Hold / Aspect		Setup / OPT /
	Hold / Aspect	+	Shift + Stop /
	Play / Pause		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Reveal / Antena		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

Original		Replacement	
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

