






 


























 



 







 







 

 

 












 





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	List	Smart / List
8	8	Vol -	Vol-
9	9	Fav	Fav / Marker / PC
Source	AV / Input / RDS	Sleep	Sleep / Timer
0	0	EPG	Guide / EPG / -/-
Audio I/II	Audio / Lang I/II	Recall	Back / Return
Menu	Menu / Home	Red / <<	<< / Tune-
Exit	Exit / Cancel / Clear	Red / <<	Red / Netflix / Search










 


























 



 







 







 

 

 






















Original	Replacement	Original	Replacement
Green / >>>	>>> / Tune+		
Green / >>>	Green / APP / Repeat		
Yellow / I<<<	I<<< / Preset-		
Yellow / I<<<	Yellow / YouTube / Repeat		
Blue / >>>I	>>>I / Preset+		
Blue / >>>I	Blue / Prime Video / Random		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Play / Slow		
Text / Play/Pause	Pause / Step / Freeze		
Stop / Still	Stop / Hold		
Radio	TV/Radio /		
Size / Aspect	Picture / Format		
Size / Aspect	Zoom / Size		
[≡x]	Eject / Surround		
Subtitle / [≡o]	Subtitle / EQ		
DMP	D.Menu / Top		
Rec	Rec / Rec Mode		







Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	List	Smart / List
8	8	Vol-	Vol-
9	9	♥	Fav / Marker / PC
Source	AV / Input / RDS	Sleep	Sleep / Timer
0	0	EPG	Guide / EPG / -/-
O)/I-II/Audio	Audio / Lang I/II	Recall	Back / Return
Menu	Menu / Home	Red	Red / Netflix / Search
Exit	Exit / Cancel / Clear	<<	<< / Tune-





	Original	Replacement	Original	Replacement
		Green		Green / APP / Repeat
		>>		>> / Tune+
		Yellow		Yellow / YouTube / Repeat
		I<<		I<< / Preset-
		Blue		Blue / Prime Video / Random
		>>		>>  / Preset+
		[≡]		Text / Goto
		Play		Play / Slow
		Pause		Pause / Step / Freeze
		[≡+]		Shift + Stop /
		Stop/Still		Stop / Hold
		Radio		TV/Radio /
		[≡+]/[++]		Zoom / Size
		[≡x]		Eject / Surround
		[≡o]/Subtitle		Subtitle / EQ
		DMP		D.Menu / Top
		Rec		Rec / Rec Mode

