










 


 






 













 

 
 




 

 

 




 


 
 

 

 
 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 LCD Menu	 Menu
 Display	 Shift + Info	 V+	 Vol +
 1	 1	 V-	 Vol -
 2	 2	 P+	 Ch +
 3	 3	 P-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 S.Mode	 Shift + Dual
 0	 0	 P.Mode	 Format
 -/--	 Shift + Guide	 Nicam	 Options
 Recall	 Back	 Sleep	 Sleep
 DVB Menu	 D. Menu	 FAV	 Pre Ch
 Input	 AV	 Text	 Text





Original	Replacement	Original	Replacement
 Hold	 Stop	 Blue/Subtitle	 Subt
 FAV-	 Shift + Ch +		
 Info	 Info		
 Lang	 Dual		
 EPG	 Guide		
 FAV+	 Shift + Ch -		
 Index	 Smart		
 Size	 Eject		
 Reveal	 3D		
 Subpage	 Shift + Subt		
 Red/Tv/Radio	 Red		
 Red/Tv/Radio	 TV/R		
 Green/Audio	 Green		
 Green/Audio	 List		
 Yellow/Freeze	 Yellow		
 Yellow/Freeze	 Pause		
 Blue/Subtitle	 Blue		

