

 

 









 







 

 





 







 

| Original | Replacement                    |
|----------|--------------------------------|
| SOURCE   | RDS AV INPUT AV / Input / RDS  |
|          | Power                          |
|          | TV 1 1                         |
|          | DVD 2 2                        |
|          | CD - STB 3 3                   |
|          | VIDEO 4 4                      |
|          | TAPE 5 5                       |
|          | TUNER 6 6                      |
|          | AUX - HDD 7 7                  |
|          | USB 8 8                        |
|          | BLUETOOTH 9 9                  |
|          | GUIDE EPG Guide / EPG / -/--   |
|          | HDMI - SAT 0 0                 |
|          | RETURN BACK Back / Return      |
|          | SHIFT + HDMI - SAT 0 Shift + 0 |
|          | OPT-TOOLS SETUP Setup / OPT /  |
|          | SHIFT + VIDEO 4 Shift + 4      |

| Original | Replacement                                     |
|----------|---|
|          | SHIFT + PC FAV MARKER Shift + Fav / Marker / PC |
|          | CH PAGE CH+ / Page+                             |
|          | DIMMER MUTE Mute / Dimmer                       |
|          | VOL + Vol+                                      |
|          | VOL - Vol-                                      |
|          | SIZE ZOOM Zoom / Size                           |
|          | CH PAGE - CH- / Page-                           |
|          | LANG I/II AUDIO Audio / Lang I/II               |
|          | TITLE SOUND Sound / Title                       |
|          | FORMAT PICTURE Picture / Format                 |
|          | TIMER SLEEP Sleep / Timer                       |
|          | Up  |
|          | Left  |
|          | OK  |
|          | Right   |
|          | HOME MENU Menu / Home                           |
|          | CLEAR EXIT CANCEL Exit / Cancel / Clear         |





| Original  | Replacement   |
|---|---|
|    |  Down                        |
|    |  Info / Angle                |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Text / Goto                 |
|    |  Shift + Text /              |
|    |  Shift + Zoom /              |
|    |  >> / Tune+                  |
|   |  Play / Slow                |
|  |  Subtitle / EQ             |
|  |  Stop / Hold               |
|  |  << / Tune-                |
|  |  Fav / Marker / PC         |
|  |  Smart / List              |
|  |  Shift + Audio / Lang I/II |

| Original  | Replacement   |
|---|---|
|  |  Pause / Step / Freeze |

