
 

















 




 

 



 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Angle	 Shift + Info / Angle
 Mute	 Mute / Dimmer	 Back / Text	 Back / Return
 Red / Open/Close	 Red / Netflix / Search	 Back / Text	 Text / Goto
 Red / Open/Close	 Eject / Surround	 Subtitle	 Subtitle / EQ
 Green / Title	 Green / APP / Repeat	 Display	 Display / Media
 Green / Title	 Sound / Title	 Menu / Info	 Info / Angle
 Yellow / DVD	 Yellow / YouTube / Repeat	 Menu	 Menu / Home
 Yellow / DVD	 Setup / OPT /	 Up	 Up
 Blue / A-B	 Blue / Prime Video / Random	 Input	 AV / Input / RDS
 Blue / A-B	 Shift + Yellow / YouTube /	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 I<<	 I<< / Preset-	 EPG	 Guide / EPG / -/-
 >>I	 >>I / Preset+	 Down	 Down
 Play	 Play / Slow	 Exit	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze	 Vol +	 Vol+
 Stop	 Stop / Hold	 FAV	 Fav / Marker / PC





Original	Replacement
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Rec / REP	 Rec / Rec Mode
 Rec / REP	 Shift + Green / APP / REPEAT
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0
 Recall / GOTO	 Smart / List

Original	Replacement
 Recall / GOTO	 Shift + Text /

