









































Original	Replacement
Power	Power
Tv/Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P.Mode --	Fav / Marker / PC
Text	Text / Goto
Hold	Shift + Stop /
S.Mode --	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Size	Zoom / Size
Aspect	Shift + Picture / Format
Subpage	Eject / Surround
Media	Smart / List
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze

Original	Replacement
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
>>I/Index	>>I / Preset+
Menu	Menu / Home
Up	Up
Audio	Audio / Lang I/II
Left	Left
OK	OK
Right	Right
Sleep	Sleep / Timer
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
Mute	Mute / Dimmer









 


































 









Original	Replacement
 CH+ / Page+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH- / Page-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS

Original	Replacement
 Smart TV	 Picture / Format
 Mouse	 Sound / Title











































Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I/Index	 >>I / Preset+
 P.Mode	 Picture / Format	 Menu	 Menu / Home
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Audio	 Audio / Lang I/II
 S.Mode	 Sound / Title	 Left	 Left
 Subtitle	 Subtitle / EQ	 OK	 OK
 Size	 Zoom / Size	 Right	 Right
 Aspect	 Shift + Picture / Format	 Sleep	 Sleep / Timer
 Subpage	 Eject / Surround	 Down	 Down
 Media	 Smart / List	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 Mute	 Mute / Dimmer





Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS

Original	Replacement
 FAV	 Fav / Marker / PC
 TVG	 Guide / EPG / -/--

