

 




 






 













 


 
 

 
 

 

 
 

 
 

 
 

 
 






	Original	Replacement		Original	Replacement
	1		1		A-B
	2		2		Angle
	3		3		Repeat
	4		4		OSD
	5		5		Return
	6		6		Enter
	7		7		Vol-
	8		8		Vol+
	9		9		Mute
	0		0		Stop
	Zoom		Eject		Play
	Menu		Menu		Pause
	Audio		Dual		<<
	Subtitle		Subt		>>
	Title		Info		Left
	Mode		Pre Ch		Right
	Setup		Options		I<<
					I<<





Original	Replacement	Original	Replacement
	>>		>>
	<<		Up
	>>		Down

Original	Replacement

