






 

 



 







 




 


 
 


 
 


 



 



 









 
 
 

 
 


 



 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 Open/Close	 Eject	 Play	 Play
 1	 1	 I<<	 I<<
 2	 2	 >>I	 >>I
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Menu DVD	 Menu
 9	 9	 Setup	 Options
 0	 0	 Vol+	 Vol +
 10+	 Guide	 Vol-	 Vol -
 Video Out	 AV	 Mute	 Mute
 <<	 <<	 Language	 Dual
 >>	 >>	 Angle	 TV/R
 Pause	 Pause	 Subtitle	 Subt





Original	Replacement	Original	Replacement
 Progressive Scan	 Format		
 Repeat	 Text		
 Random	 3D		
 Zoom	 Shift + Eject		
 OSD	 Pre Ch		
 A-B	 List		
 PBC	 Back		
 L/R	 Info		
 Program	 Sleep		
 Sub-Menu	 D. Menu		

