

























Original	Replacement	Original	Replacement
 Power	 Power	 Prog	 TV/Radio /
 Open / Close	 Eject / Surround	 Shuffle	 Blue / Prime Video / Random
 1	 1	 Video	 Smart / List
 2	 2	 Repeat	 Green / APP / Repeat
 3	 3	 Repeat A-B	 Yellow / YouTube / Repeat
 4	 4	 Title	 Sound / Title
 5	 5	 PBC	 Picture / Format
 6	 6	 Goto	 Text / Goto
 7	 7	 L/R	 D.Menu / Top
 8	 8	 Subtitle	 Subtitle / EQ
 9	 9	 Setup	 Setup / OPT /
 0	 0	 Up	 Up
 +10	 Guide / EPG / -/-	 Display	 Display / Media
 Step	 Shift + Pause / Step /	 Left	 Left
 Slow	 Shift + Play /	 Enter	 OK
 Zoom	 Zoom / Size	 Right	 Right
 Angle	 Info / Angle	 Menu	 Menu / Home





	Original	Replacement	Original	Replacement
	 Down	 Down		
	 Return	 Back / Return		
	 Vol+	 Vol+		
	 Mute	 Mute / Dimmer		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Stop	 Stop / Hold		
	 Vol-	 Vol-		
	 Audio	 Audio / Lang I/II		
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Play / Pause	 Play / Slow		
	 Play / Pause	 Pause / Step / Freeze		

