







 



 
 


 
 

 
 



 



 



 



 


 
 


 
 
 


 
 


 
 


 
 


 



 







Original	Replacement	Original	Replacement
	Power		Power
	HDMI Control		Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<<		I<<<
	<<<		<<<
	>>>		>>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	PIP / World		3D
	Red / Zoom		Red
	Green / Repeat		Green
	Yellow / Root		Yellow
	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left





Original		Replacement		Original	Replacement
	OK		Ok		
	P/CH +		Ch +		
	P/CH -		Ch -		
	Mute		Mute		
	Vol +		Vol +		
	Vol -		Vol -		
	Menu		Menu		
	Source		AV		
	Return		Back		
	EPG		Guide		
	Info		Info		
	Sleep		Sleep		
	FAV		Shift + Pre Ch		
	Angle / Media		Media		
	Search Mode		TV/R		
	Display		Shift + Info		
	Presets		List		

