
 
 
 
 
 
 

 
 
 




 
 
 
 
 

 
 
 
 


 

 

 
 
 




| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | Power |  | Green / APP / Repeat |
|  | DTV |  | Yellow / YouTube / Repeat |
|  | TV |  | Blue / Prime Video / Random |
|  | AV |  | Vol+ |
|  | 1 |  | Info / Angle |
|  | 2 |  | CH+ / Page+ |
|  | 3 |  | Vol- |
|  | 4 |  | Mute / Dimmer |
|  | 5 |  | CH- / Page- |
|  | 6 |  | Guide / EPG / -/-- |
|  | 7 |  | Setup / OPT / |
|  | 8 |  | Up |
|  | 9 |  | Left |
|  | Text |  | OK |
|  | 0 |  | Right |
|  | PRE-CH |  | Down |
|  | Red |  | Menu / Home |





| Original | Replacement | Original | Replacement |
|--|--|----------|-------------|
|  Exit |  Exit / Cancel / Clear | | |
|  << |  << / Tune- | | |
|  Play |  Play / Slow | | |
|  >> |  >> / Tune+ | | |
|  Rec |  Rec / Rec Mode | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  File List/[≡i] |  Smart / List | | |
|  Bookmark/[.,≡] |  Display / Media | | |
|  Repeat/[≡O] |  Shift + Green / APP / REPEAT | | |
|  A<>B/[≡?] |  Shift + Yellow / YouTube / REPEAT A-B | | |
|  PIC Size |  Zoom / Size | | |
|  PIC Mode |  Picture / Format | | |
|  SND Mode |  Sleep / Timer | | |
|  M/S |  D.Menu / Top | | |
| | | | |
| | | | |
| | | | |

