





| Original | Replacement | Original | Replacement |
|---|--|---|---|
|  |  +  Shift + Power |  |  << / Tune- |
|  |  Power |  |  9 |
|  |  Red / Netflix / Search |  |  8 |
|  |  Green / APP / Repeat |  |  5 |
|  |  Yellow / YouTube / Repeat |  |  >> / Preset+ |
|  |  Blue / Prime Video / Random |  |  CH+ / Page+ |
|  |  +  Shift + Red / Netflix / |  |  7 |
|  |  +  Shift + Green / APP / |  |  I<< / Preset- |
|  |  +  Shift + Yellow / YouTube / |  |  CH- / Page- |
|  |  +  Shift + Blue / Prime |  |  Play / Slow |
|  |  0 |  |  Pause / Step / Freeze |
|  |  3 |  |  Stop / Hold |
|  |  6 |  |  Rec / Rec Mode |
|  |  >> / Tune+ |  |  Vol+ |
|  |  2 |  |  Vol- |
|  |  1 |  |  Mute / Dimmer |
|  |  4 |  |  Setup / OPT / |



