




 


 











 


 





 












Original	Replacement
 Power	 Power
 Tv Standby	 Shift + Power
 Input Tv	 Shift + AV
 Mute Tv	 Shift + Mute
 Vol+ Tv	 Shift + Right
 Vol- Tv	 Shift + Left
 CH+ Tv	 Shift + Ch +
 CH- Tv	 Shift + Ch -
 TV	 TV/R
 Aspect/Ratio	 Format
 HD	 Smart
 Mosaic	 Media
 Mute	 Mute
 Messages	 Options
 Help	 AV
 Cancel	 Shift + Back
 Guide	 Guide

Original	Replacement
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 Ok
 FAV	 Pre Ch
 Planner	 Text
 Back	 Back
 Rec	 Rec
 Pause	 Pause
 Stop	 Stop
 <<	 <<





Original		Replacement		Original		Replacement	
	Play		Play		#		Subt
	>>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	*		Dual				

