

 

 

 
 


Original	Replacement	Original	Replacement
 Guide	 Guide / EPG / -/--	 0	 0
 ↔/Interactive	 Menu / Home	 Radio	 TV/Radio /
 [: :]/Cinema	 Display / Media	 Back	 Back / Return
 Power	 Power	 Red	 Red / Netflix / Search
 1	 1	 Green	 Green / APP / Repeat
 2	 2	 Yellow	 Yellow / YouTube / Repeat
 3	 3	 Blue	 Blue / Prime Video / Random
 >>/Goto	 >> / Tune+	 Vol+	 Vol+
 4	 4	 Up	 Up
 5	 5	 CH+	 CH+ / Page+
 6	 6	 Left	 Left
 i/Details	 Info / Angle	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Vol-	 Vol-
 9	 9	 Down	 Down
 ?/Help	 Smart / List	 CH-	 CH- / Page-
 TV	 AV / Input / RDS	 Mute	 Mute / Dimmer

Original	Replacement	Original	Replacement
 0	 0	 0	 0
 Radio	 TV/Radio /	 Back	 Back / Return
 Red	 Red / Netflix / Search	 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat	 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+	 Up	 Up
 CH+	 CH+ / Page+	 Left	 Left
 OK	 OK	 Right	 Right
 Vol-	 Vol-	 Down	 Down
 CH-	 CH- / Page-	 Mute	 Mute / Dimmer





Original		Replacement		Original		Replacement	
	A		Picture / Format				
	*/Favorites		Fav / Marker / PC				
	€/Account		Exit / Cancel / Clear				
	:::/Mosaic		Setup / OPT /				
	[Y]/Messages		Subtitle / EQ				

