



Original	Replacement	Original	Replacement
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Time Shift	 D.Menu / Top	 Up	 Up
 7	 7	 CH+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 OK	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH-	 CH- / Page-





Original	Replacement	Original	Replacement
Down	Down		
Filelist	Smart / List		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Red/FAV/Daily	Red / Netflix / Search		
Green/DEL/Weekl	Green / APP / Repeat		
Yellow/Movie/P.Inf	Yellow / YouTube / Repeat		
Blue/Look/Timer	Blue / Prime Video / Random		

