
 
 




 

 

 

 



 
 
 
 






 



Original	Replacement	Original	Replacement
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Original		Replacement	
	↑		Shift + Ch +
	↓		Shift + Ch -
	A - B		I<<
	STEP		>>I
	STOP		Stop
	PAUSE		Pause
	REC		Rec
	REW		<<
	PLAY		Play
	FWD		>>
	SUBTITLE		Subt
	V-FORMAT		Format
	INFO		Info
	OPTION		Options
	PLAYLIST		Media
	LIST		List
	TIME		AV

Original		Replacement	
	BOOK		Smart

