



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Back / Return
PMode	Picture / Format
I / II	Audio / Lang I/II
EPG	Guide / EPG / -/--

Original	Replacement
Sleep	Sleep / Timer
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol +	Vol+
ADD / DEL	Shift + Back / Return
PR +	CH+ / Page+
Vol -	Vol-
Cancel	Shift + Exit / Cancel / Clear
PR -	CH- / Page-
Red	Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		Subpage / Rec Rec / Rec Mode
	Yellow Yellow / YouTube / Repeat		Index / List Smart / List
	Blue Blue / Prime Video / Random		
	Play / Pause Play / Slow		
	Play / Pause Shift + Play /		
	Stop Stop / Hold		
	Setup Setup / OPT /		
	Eject Eject / Surround		
	I<< / Text Shift + I<< / Preset-		
	I<< / Text I<< / Preset-		
	<< << / Tune-		
	Size Zoom / Size		
	S. Title M. Sound / Title		
	>>I / Hold >>I / Preset+		
	>>I / Hold Shift + >>I / Preset+		
	>> / Reveal >> / Tune+		
	Subpage / Rec Shift + Rec / Rec Mode		

