 


 
 

 
 

 
 
 
 







 


 
 


 



 

 
 
 



 
























 







Original		Replacement		Original		Replacement	
	Power		Power		Favorite		Shift + Pre Ch
	Mute		Mute		Play		Play
	Subtitle		Subt		Pause		Pause
	<<		<<		Stop		Stop
	>>		>>		Info		Info
	l<<		l<<		1		1
	>>l		>>l		2		2
	Record		Rec		3		3
	Up		Up		4		4
	CH+		Ch +		5		5
	CH-		Ch -		6		6
	Down		Down		7		7
	Right		Right		8		8
	Vol+		Vol +		9		9
	Vol-		Vol -		0		0
	Left		Left		EPG		Guide
	OK		Ok		Tv/Radio		TV/R





Original		Replacement		Original		Replacement	
	Audio		Dual				
	Recall		Pre Ch				
	Repeat	 + 	Shift + Text				
	Teletext		Text				
	File		Smart				
	Device		AV				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Menu		Menu				
	Exit		Exit				

