




Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject
	Mute		Mute
	OSD / Info		Info
	V-Mode		Smart
	P/N / Fav		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide

Original	Replacement	Original	Replacement
	Goto		Media
	Setup		Options
	Angle		Format
	Text / Title		Text
	Subtitle		Subt
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	PBC / EPG		Guide
	Source		AV
	Exit		Exit
	<<		<<
	>>		>>
	Play / Pause		Play





Original	Replacement	Original	Replacement
 Play / Pause	 Pause	 Vol+	 Vol +
 Stop	 Stop		
 I<<	 I<<		
 >>I	 >>I		
 Red / Prog	 Red		
 Red / Prog	 Sleep		
 Green / Step	 Green		
 Yellow / Repeat	 Yellow		
 Yellow / Repeat	 Shift + Text		
 Blue / A-B	 Blue		
 Zoom	 Shift + Eject		
 Slow	 TV/R		
 Vocal	 Dual		
 Audio	 Shift + Dual		
 CH-	 Ch -		
 CH+	 Ch +		
 Vol-	 Vol -		

