








 



 



 










 








Original	Replacement
 Power	 Power
 Goto	 Text / Goto
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide / EPG / -/--
 Step	 Shift + Pause / Step /
 Subtitle	 Subtitle / EQ

Original	Replacement
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 PBC	 Fav / Marker / PC
 Title	 Sound / Title
 Up	 Up
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 Enter	 OK
 Right	 Right
 Slow	 Shift + Play /
 Setup	 Setup / OPT /
 Down	 Down
 Zoom	 Zoom / Size
 Menu	 Menu / Home
 Repeat	 Green / APP / Repeat





Original	Replacement
AB A-B	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
PROGRAM Program	 TV/Radio /
DISPLAY Display	 Display / Media
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement

