



Original	Replacement	Original	Replacement
	Power		Recall
	Mute		Back / Return
	V.Format		Vol-
	Mute / Dimmer		Vol+
	Shift + Picture / Format		CH- / Page-
	Sleep / Timer		CH+ / Page+
	Text / Goto		Menu / Home
	TV/Radio /		Up
	1		Exit / Cancel / Clear
	2		Left
	3		OK
	4		Right
	5		Shift + CH- /
	6		Down
	7		Shift + CH+ /
	8		Fav / Marker / PC
	9		Guide / EPG / -/-
	Smart / List		Info / Angle
	0		





Original	Replacement
	Display / Media
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Audio / Lang I/II
	Blue / Prime Video / Random
	Subtitle / EQ
	Play / Slow
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	Shift + Text /
	Shift + Pause / Step /
	<< / Tune-
	>> / Tune+
	Zoom / Size
	Shift + Stop /

Hold

Original	Replacement
	I<< / Preset-
	>>I / Preset+
	Shift + 0
	Picture / Format
	Setup / OPT /
	Shift + Setup / OPT / Tools

