 






 

 


 


 
 





 

 
 

 


 
 

 


 
 













 








 
 










 
 




	Original	Replacement		Original	Replacement
	Standby		Power		Right
	Rec PVR		Rec		Left
	PVR List		List		Ok
	Mute		Mute		Vol +
	EPG		Guide		Vol -
	Audio		Dual		1
	Info		Info		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
	Down		Down		Goto
					Back
					AV





	Original	Replacement	Original	Replacement
	<<	 <<		
	>>	 >>		
	⏪	 ⏪		
	>>	 >>		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Repeat	 +  Shift + Text		
	Red	 A Red		
	Green	 B Green		
	Yellow	 C Yellow		
	Blue	 D Blue		

